




Toll Free: 866-443-6623
www.holdupdisplays.com

HD11-FW Twin Limb Bow Holder Assembly Instructions

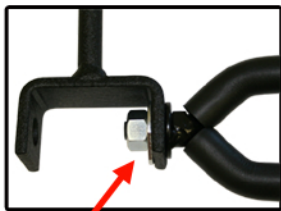

Nuts and washers go on
the inside of the twin
limb arm bracket.

Angles are adjustable to
accommodate different
angles of bow limbs.

Choose location for hanger. Drive screws through mounting holes of hanger into wall using a Phillips screwdriver. If a wall stud is not found, these pilot holes are necessary for installing the drywall anchors. To do this, use the screwdriver to push and turn the anchors clockwise until flush. Remount hanger with screw into anchor. **DO NOT REUSE ANCHORS.**