


Toll Free: 866-443-6623
www.holdupdisplays.com



Choose location for display. One of the pieces may be inverted (as shown) to accommodate different gun styles; to keep them level. Drive screws through mounting holes of hanger into wall using a Phillips screwdriver. If a wall stud is not found, these pilot holes are necessary for installing the plastic toggles. To do this, use the screwdriver to push and turn the toggle clockwise until flush. Remount hanger with screw into toggles. **DO NOT REUSE TOGGLES.** Each set includes 1 narrow and 1 wide cradle. Use the narrow cradle for the trigger end of the firearm and use the wide for the forward end. Screw cradles into threaded holes of the display and turn clockwise until snug, and the tips of the cradles point upward. (Allow to pivot freely.)

Figure 1

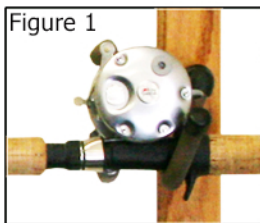

If properly positioned, when rod is pulled back, the yoke should be pinned between the reel and trigger. (See figure 1.)

