


HD19 Security Lock Instructions For Use

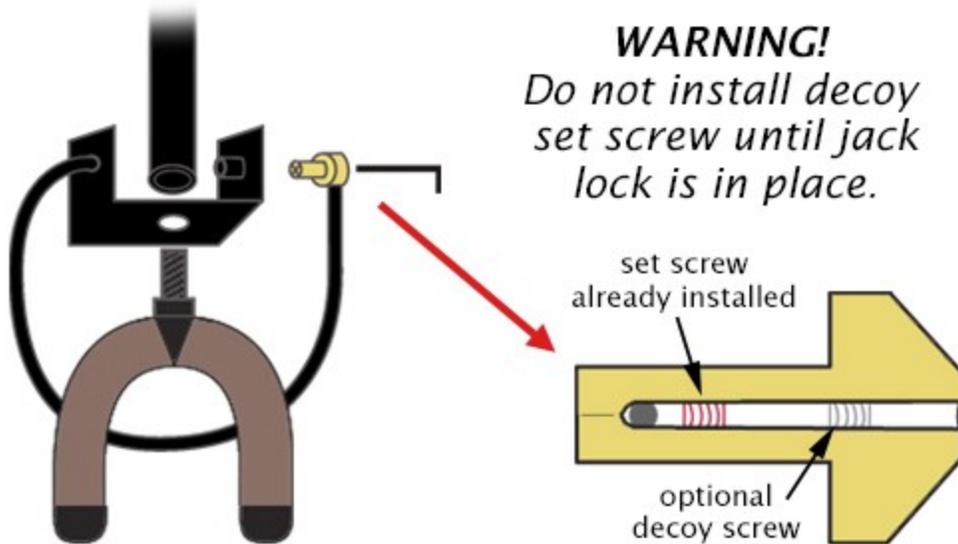

To install: Remove yoke from the hanger then re-install as diagram shows. Bring the cable around the front of the display & insert the brass jack lock into receiver. Turn allen wrench clockwise until snug.

Do not over-tighten!

How it works: The front set screw, which locks and unlocks the cable, is unable to be accessed with the decoy screw in place.

