


**FIGURE 1**

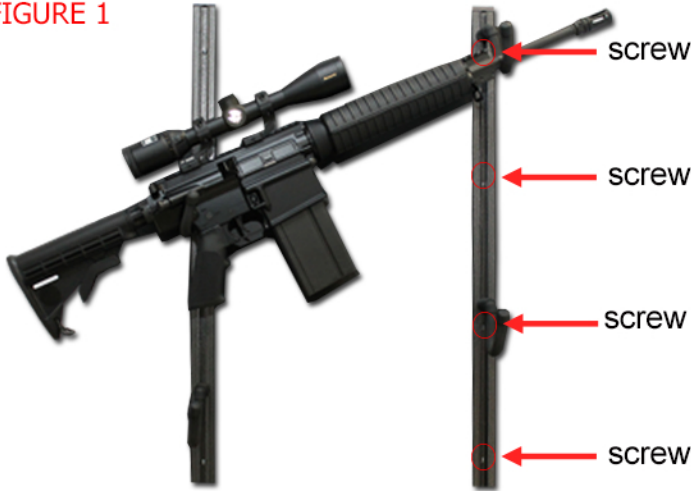

Choose a location for display. Pre-drill 5/32" holes at approximately 3" and 17" from each end of the track (4 holes total), as shown above in **FIGURE 1**. Drive screws through pre-drilled holes of track into wall using a Phillips screwdriver. If a wall stud is not found, these pilot holes are necessary for installing the plastic drywall anchors. To do this, use the screwdriver to push and turn the anchor clockwise until flush. Remount track with screw into anchors. **DO NOT REUSE ANCHORS.**



HDTK:  
Aluminum Display Track



HD49:  
Horizontal Firearm Cradles

Combine the HDTK and HD49 (both sold in pairs)  
to create the HDTK system shown above in **FIGURE 1**.